


Alpha1 v4 to v5 Firmware Migration Procedure

This document provides the technical steps required to migrate device partitions and upgrade to the latest production firmware.

1. Initial Firmware Preparation


- **Navigate** to the target device within the Node Cloud dashboard.
- **Select "Migration"** from the Release dropdown menu.
- **Click "Force Update"** and wait for the device to reboot.
- **Confirm** that the firmware version is now **XX-0.10.10**.

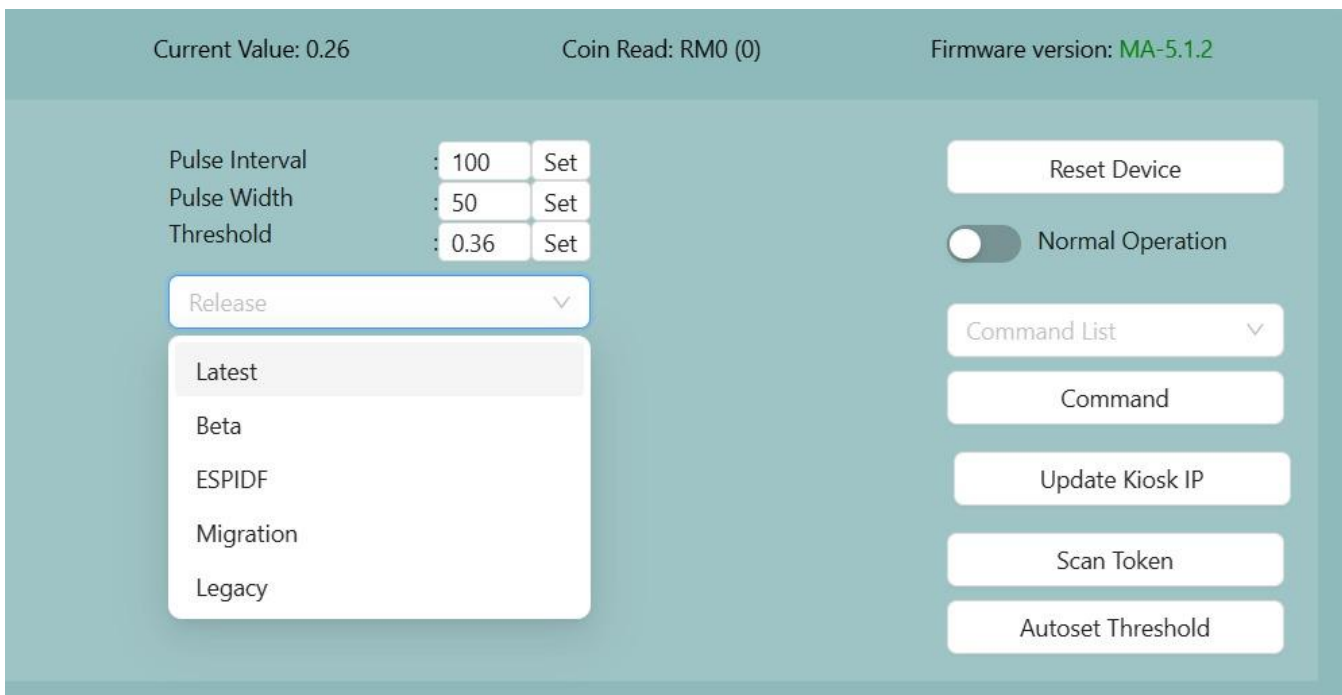

2. Pre-Migration Validation


Execute the **Fetch Partition Status** command from the command list to determine the migration state.

Response	Action
PartitionMigration_Uninitiated	Proceed to Migration
PartitionMigration_NotStarted	Proceed to Migration
PartitionMigration_Completed	Migration not needed; skip to Phase 4
PartitionMigration_ErrorReadingStatus	Stop and report issue
PartitionMigration_Failed	Stop and report issue

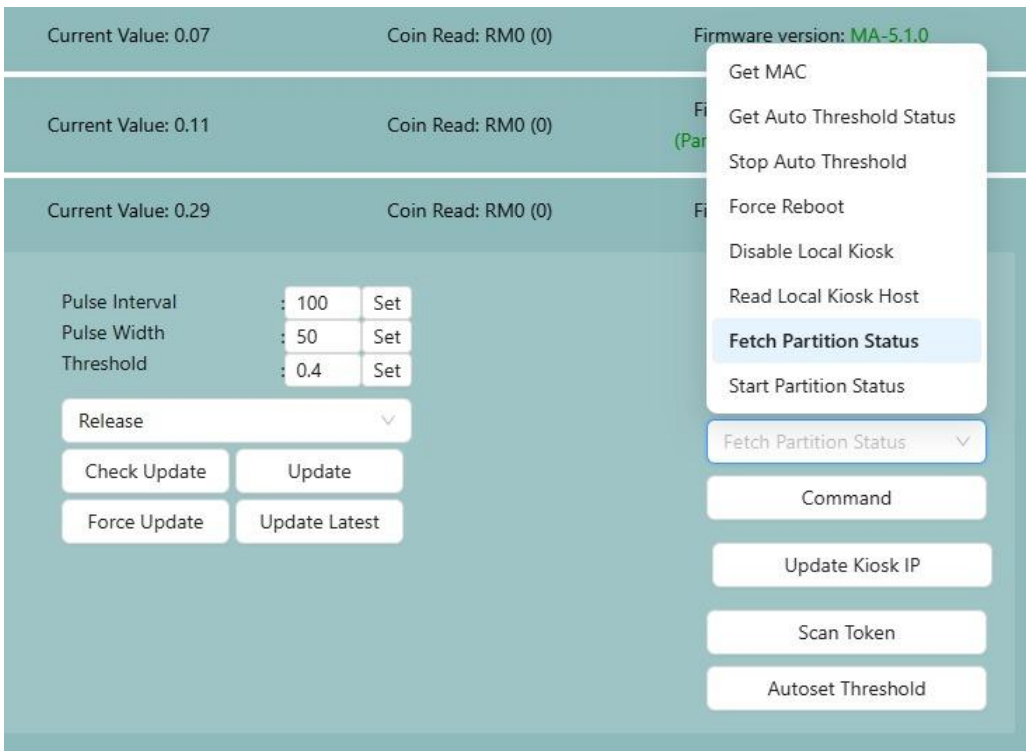

3. Partition Migration Process

1. Select **Start Partition Migration** from the command list and click **Command**.
2. **Observation:** The device may reboot twice. Do not interrupt power during this time. The entire process may take around 2-5 minutes.
3. **Success Criteria:** The migration is successful when `PartitionReformat_Success` is published and the device reboots.
4. If `PartitionReformat_Success` does not appear before device reboot, select **Fetch Partition Status** after the device reboots and click **Command**. If `PartitionMigration_Completed` is published, proceed with device update, If `Partition_MigrationInProgress` is shown, wait for next reboot before updating.

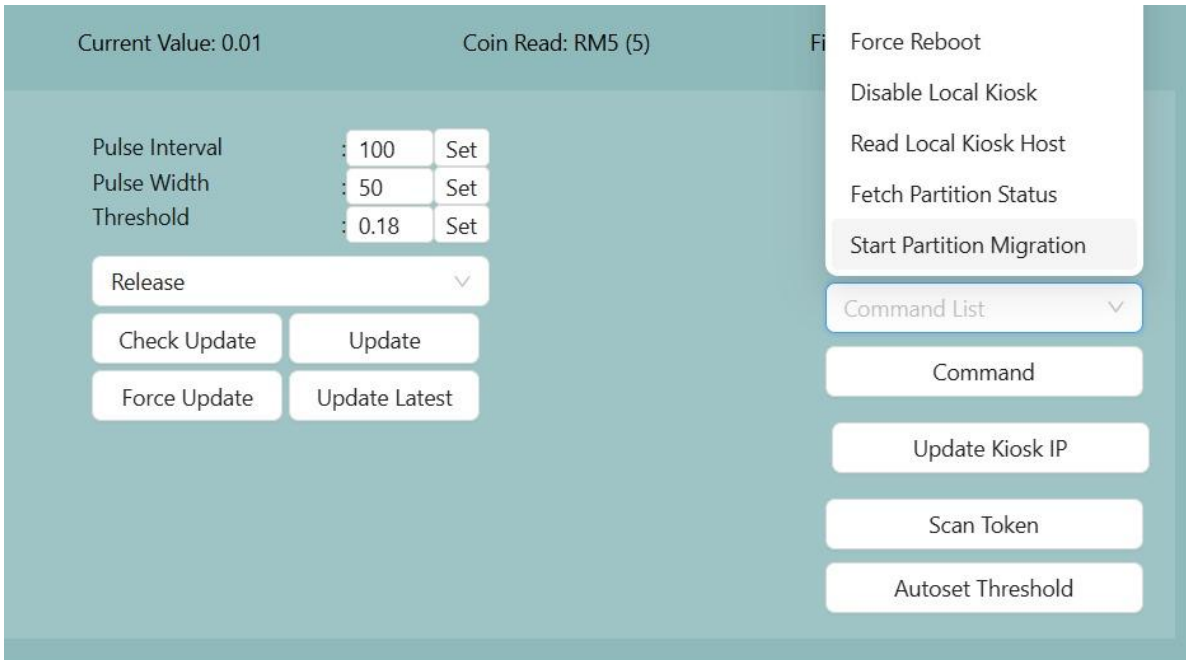

[!CAUTION] If `PartitionReformat_Fail` or `PartitionReformat_CriticalFail` is displayed, do not proceed. Report the failure immediately!

4. Final Firmware Update

- Select **Latest** in the Release dropdown menu.
- Click **Check Update**.
- When prompted with "**5.X.X available**", click **Update**.
- **Verification:** Following the reboot, ensure the firmware version is updated to **XX-5.X.X**.

If still intent to use legacy, use the legacy release (firmware version will be 4.4.11)

Revision #11

Created 21 December 2025 14:11:44 by Rahul

Updated 14 January 2026 06:36:55 by Rahul