
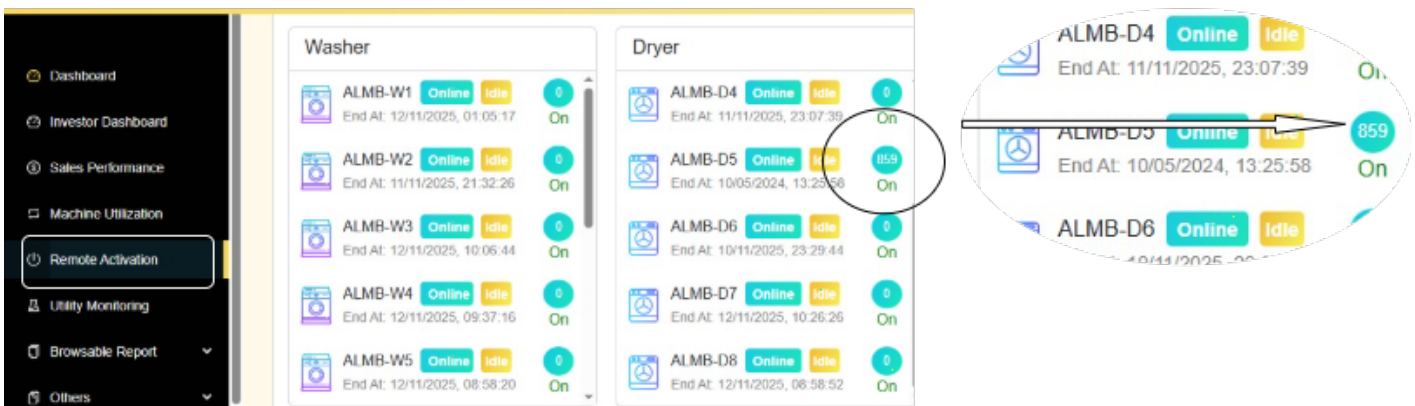


# The current value is not increasing

## 1. Issue Description:

When the washer or dryer starts its cycle, the current value does not increase as expected. Consequently, the app display does not change from blue to green.

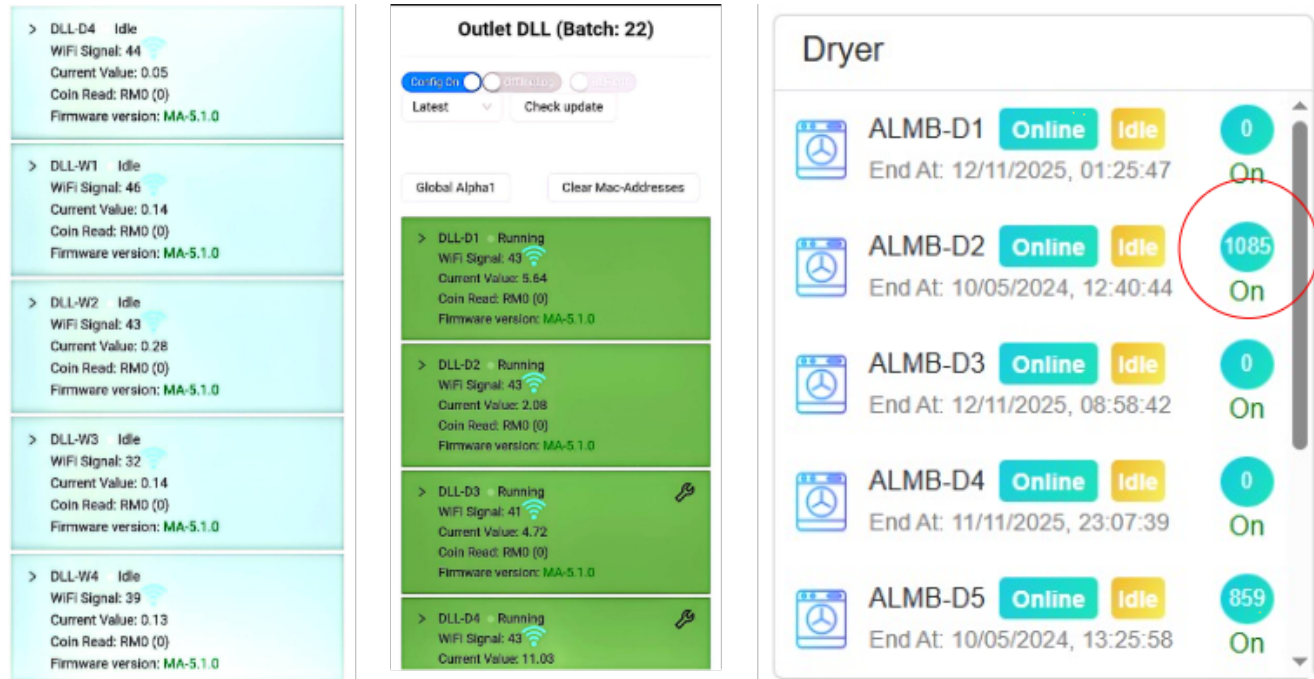


## Possible Cause:

There may be an issue with the current sensor, communication between the device and the app, or a delay in data update during the start of the cycle.

## Recommendation:

**Check the wiring connection between the current sensor and the Alpha-1 device, ensure sensor clip tighten to device properly, and verify that the threshold at node cloud increasing during the machine running.**

**Clip the given split-core current transformer at the Live wire.**

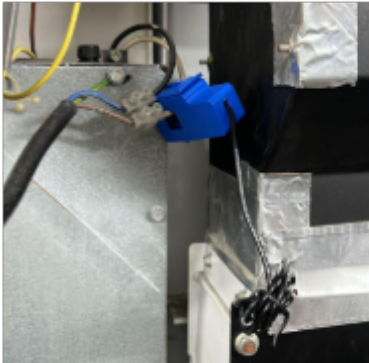

---

Revision #11

Created 5 November 2025 05:12:48 by Sulaiza

Updated 12 November 2025 03:37:27 by Sulaiza