
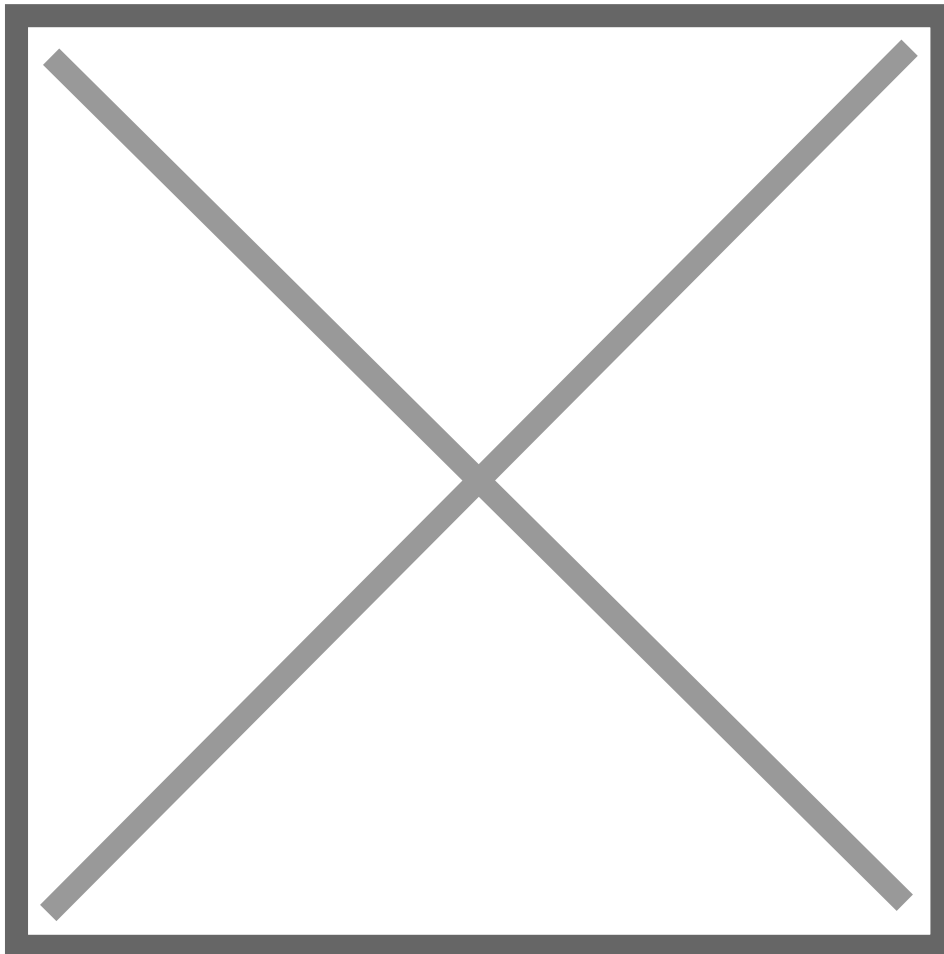



Dexter - Installation

Alpha-1 Placement on Machine

Example: Dexter Stacked Washer Dryer

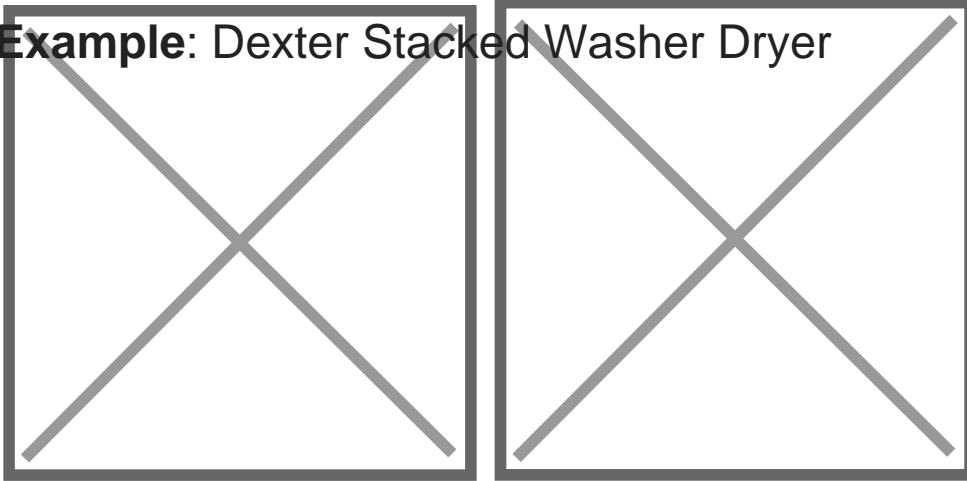


Example: Dexter Stacked Dryer

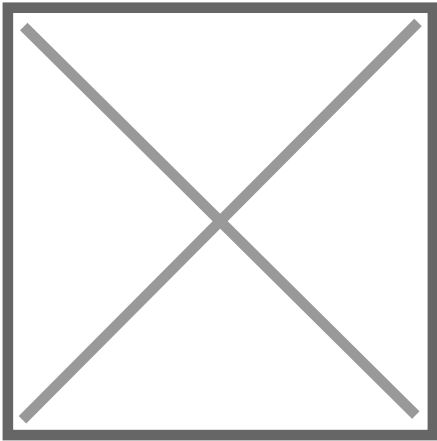


Connection from Harnnes to ALPHA-1

(A) **Alpha-1 connection "Input" "Output"**

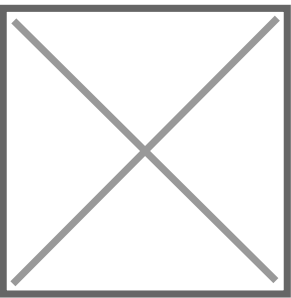

1. device has input and output connections labeled (IN: +, -) and (OUT: +, -). Use a 4-core cable to connect the input (+/-) and output (+/-) terminals.

(B) **Harness connection on machine "Dexter"**

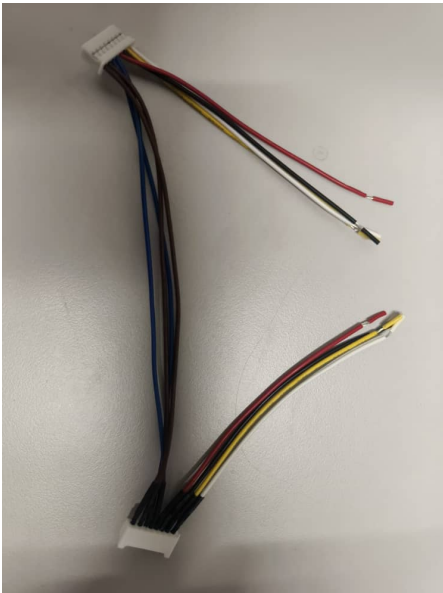

2. This harness cable is connected to the machine's coin acceptor. It has two channels: the first channel uses yellow and white wires, and the second channel uses red and black wires.

3. Try using the first channel (**yellow/white**) to connect the input and output on the harness using a 4-core cable from the device."

4. Begin testing. If there is no response, check the input and output connections and the device. If all connections are correct but the issue remains, try switch to the second channel.

Revision #3

Created 13 August 2025 08:01:12 by KUNA

Updated 14 August 2025 04:22:52 by KUNA